

CADENCE 3 LIGHT LED PENDANT

SKU# 020952

Rated Voltage 220-240V~ 50Hz

To ensure correct function and safety, please read and follow all instructions carefully before assembly, installation and use of this product. Please keep instructions for future reference.

Warranty

- This luminaire is covered by a 3-year warranty. The warranty is from date of purchase, not the date of installation.
- If the luminaire is not assembled and installed by a licensed electrician, the warranty will be void.
- Please retain the proof of purchase and evidence of installation by a licensed electrician for any warranty enquiries.
- The use of non-compatible dimmers may damage your LED luminaire and will void your warranty.
- Warranty will be void if there is any damage due to improper usage or modification to the luminaire.
- Failure to comply with instructions in this manual may increase the risk of damage or injury and will void the warranty.

Installation Requirements

- This luminaire must be assembled and installed by a licensed electrician.
- All wiring and installation of the luminaire must adhere to the latest local and national wiring rules.
E.g. AS/NZS 3000 Electrical Installations.
- The luminaire is a Class I product and must be earthed during wiring and installation.
- Select a suitable location for installation:
 - This luminaire is suitable for indoor use only.
 - The mounting point must support 2 times the weight of the luminaire.
 - If installing a luminaire in an area prone to moisture, ensure that the area is well ventilated, and an appropriately rated exhaust fan is used if required. Damage or corrosion caused by moisture is not a product fault, and as such is not covered under warranty.
- **“Scene Change at the Wall Switch”** functionality is enabled when the toggle switch on the luminaire canopy is set to the “WC” position. This colour shifting function is designed to operate with a mechanical or relay ON/OFF switch, as well as selected semi-conductor ON/OFF switches, such as MFL Artisan or Lucci Power Dimmers with ON/OFF functionality. Please note the colour shifting function may not operate correctly on all semi-conductor switches and will not work on any switch that features a ‘soft-start’ function.
- This luminaire is dimmable and the use of an LED dimmer is strongly recommended. Please see **Highly Recommended Dimmers** Section of the Specifications on Page 6 for a list of SKUs that have been specifically designed & tested for use with this luminaire.
NOTE: Dimming may cause buzzing sounds or a slight flicker. There may be slight delays with the LED luminaire start up or slight uneven light performance when more than one LED luminaire is linked together, switched ON or dimmed. This is not a product fault and as such is not covered under warranty.
NOTE: Some dimmers have a minimum load of 20W. Ensure the dimmer position is on the maximum setting before turning on the LED luminaire and adjust the dimmer down to your desired light level.
NOTE: Testing cannot account for installation variables such as variation in mains supply voltage, cable capacitance, electrical noise, transients, surges and ripple control signals (commonly found in NSW & QLD).
NOTE: The information provided is correct to the best of Beacon Lighting’s knowledge at the date of publication.
- Take care not to pull any electrical wires during unpacking as this may damage the connection.
- Lay out all the components on a smooth surface and make sure no components are missing before assembling. If parts are missing, return the complete product to the place of purchase for inspection or replacement.
- Check whether the luminaire has been damaged during transport. Do not operate/install any product which appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.

Installation Directions

WARNING: Ensure power to the circuit you are working on has been switched OFF before commencing any electrical work.

NOTE: Due to the size/weight/wiring of the luminaire, two people will be required to lift it up during the installation process.

1. Remove all packaging material from the product and be careful not to throw away accessories that may be hidden within the packaging material. If assembly is required, place the luminaire on a smooth non-scratch surface.
2. Plan and mark out the desired configuration of the light fitting on the ceiling.
3. Remove the mounting bracket (B) from the canopy (F) by loosening the screws (C) on the side.
4. Use the mounting bracket (B) as a template to mark the screw positions on the ceiling.
5. Install the mounting bracket (B) onto the ceiling by using appropriately sized mounting screws (D) and anchors (A). Ensure the screws (D) and anchors (A) used are suitable for the mounting surface and the surrounding environment.
6. Install the Hanger Bracket Bases (N) using the following steps:
 - Remove the hanger bracket base (N) from the hanger bracket body (P) by turning counterclockwise.
 - Install hanger bracket base (N) onto the ceiling using appropriately sized mounting screws (D) and anchors (A). Ensure the screws (D) and anchors (A) used are suitable for the mounting surface and the surrounding environment.
 - Repeat until all 3 hanger brackets bases have been installed onto the ceiling.
7. Pass the connector wires (H) through the holes from inside the Canopy (F) and ensure they remain exposed outside of the canopy during the subsequent steps to facilitate the wiring connections outlined in Step 10.
8. Connect the mains supply wire to the terminal block (E). Ensure the wires are secure and no bare wires are exposed.

Mains Supply Wire

Earth – Yellow/Green

Neutral – Blue or Black

Live – Brown or Red

Luminaire Wire / Terminal Block

Yellow/Green or 

Blue or N

Brown or L

NOTE: The luminaire is a Class I product and must be earthed during wiring and installation.

9. Install the canopy (F) onto the mounting bracket (B) and secure by tightening the screws (C) on the sides.
10. Install each of the Lights (M) into the canopy by completing the following steps:
 - Determine the suspension length required for the powered side of the light (M).
 - If the suspension length needs to be adjusted, loosen the cord anchorage screw (L) on the suspension nut (J) with the supplied Allen key (K) and adjust the length of the suspension cord by pushing the excess cord through the suspension nut (J), then fixing the suspension cord in place by tightening the cord anchorage screw (L), taking care not to overtighten and damage the cord.
 - Connect the wiring loom connector (I) to the connector wire (H) and then feed excess suspension cord into the canopy (F).
 - Secure the suspension nut (J) onto the canopy (F) by turning the suspension nut clockwise until it is fully attached to the canopy and no threads on the suspension nut are visible. Ensure the powered suspension cord for the light (M) is not twisted or tangled when completing this step.
 - Repeat until the powered end of all 3 lights have been installed onto the canopy (F).

11. Complete the installation of each light (M) by fixing the unpowered suspension wire (Q) and hanger bracket (P) onto the hanger bracket bases (N) by completing the following steps:
 - install the hanger bracket (P) onto the hanger bracket base (N) by turning clockwise.
 - Determine the suspension length required for the unpowered side of the light (M).
 - If the length of the suspension wire (Q) needs adjusting, loosen the wire suspension fixing screw (O) on the side of the corresponding hanger bracket (P) and pull the excess suspension wire through the hanger bracket (P) and then out of the hole in the side. If the suspension wire needs to be extended, press in and hold the middle cylinder of the cord anchorage on the bottom of the hanger bracket (P) and pull the suspension wire (Q) back through the hanger bracket.
 - Once the desired suspension length has been reached, tighten the wire suspension fixing screw (O) on the side of the hanger bracket (P) with the supplied Allen key (K), and then remove any excess suspension wire from the side of the hanger.
 - Repeat until the unpowered wire suspension (Q) of all 3 lights have been fixed onto their corresponding hanging bracket bases (N)
12. If the suspension wires of the lights (M) are not positioned vertically from the ends of the light, the rotation of each side can be adjusted by loosening the screws (R) at both ends with the supplied Allen key (K), adjusting the suspension positions, and then tightening the screws (R).
13. The colour temperature of this luminaire can be pre-set to a desired colour temperature OR operated via the connected wall switch. Use the toggle switch (G) on the luminaire canopy (F) to select your desired colour temperature ("WW" for 3000K *Warm White*, "CW" for 4000K *Cool White*, or "DL" for 5000K *Daylight*) or move the switch to the "WC" (*Wall Control*) setting to enable "Scene Change at the Wall Switch" functionality.

NOTE: The toggle switch (G) must only be operated when power to the luminaire has been switched off. Changing the toggle switch settings while the luminaire is powered may cause damage to the LED driver.
14. After the installation, switch on the luminaire to test all the lighting functions and enjoy your new luminaire.

SCENE CHANGE AT THE WALL SWITCH (3000K – 5000K – 4000K):


- To operate the "Scene Change at the Wall Switch" colour shifting function, use the connected mechanical or relay ON/OFF wall switch.

NOTE: The switch on the canopy of the luminaire must be at the "WC" (Wall Control) position. Do not adjust the position of the switch unless power to the luminaire has been switched off.

NOTE: If the luminaire is installed with dimmer, it is recommended to turn the dimmer to the highest position before adjusting the colour temperature as below.

- While the luminaire is on, toggle the wall switch OFF and ON again within 3 seconds. The colour shifting sequence will jump from 3000K → 5000K → 4000K.
- For the colour shifting to memorise the colour temperature, leave the wall switch OFF for over 7 seconds.
- To reset the colour shifting, toggle the wall switch OFF and ON twice within 1 second. Repeat if it doesn't reset.

NOTE: If using an MFL Artisan or Lucci Power Dimmer, please see the Dimmer Installation Manual for instructions on how to operate the colour shifting functions correctly.

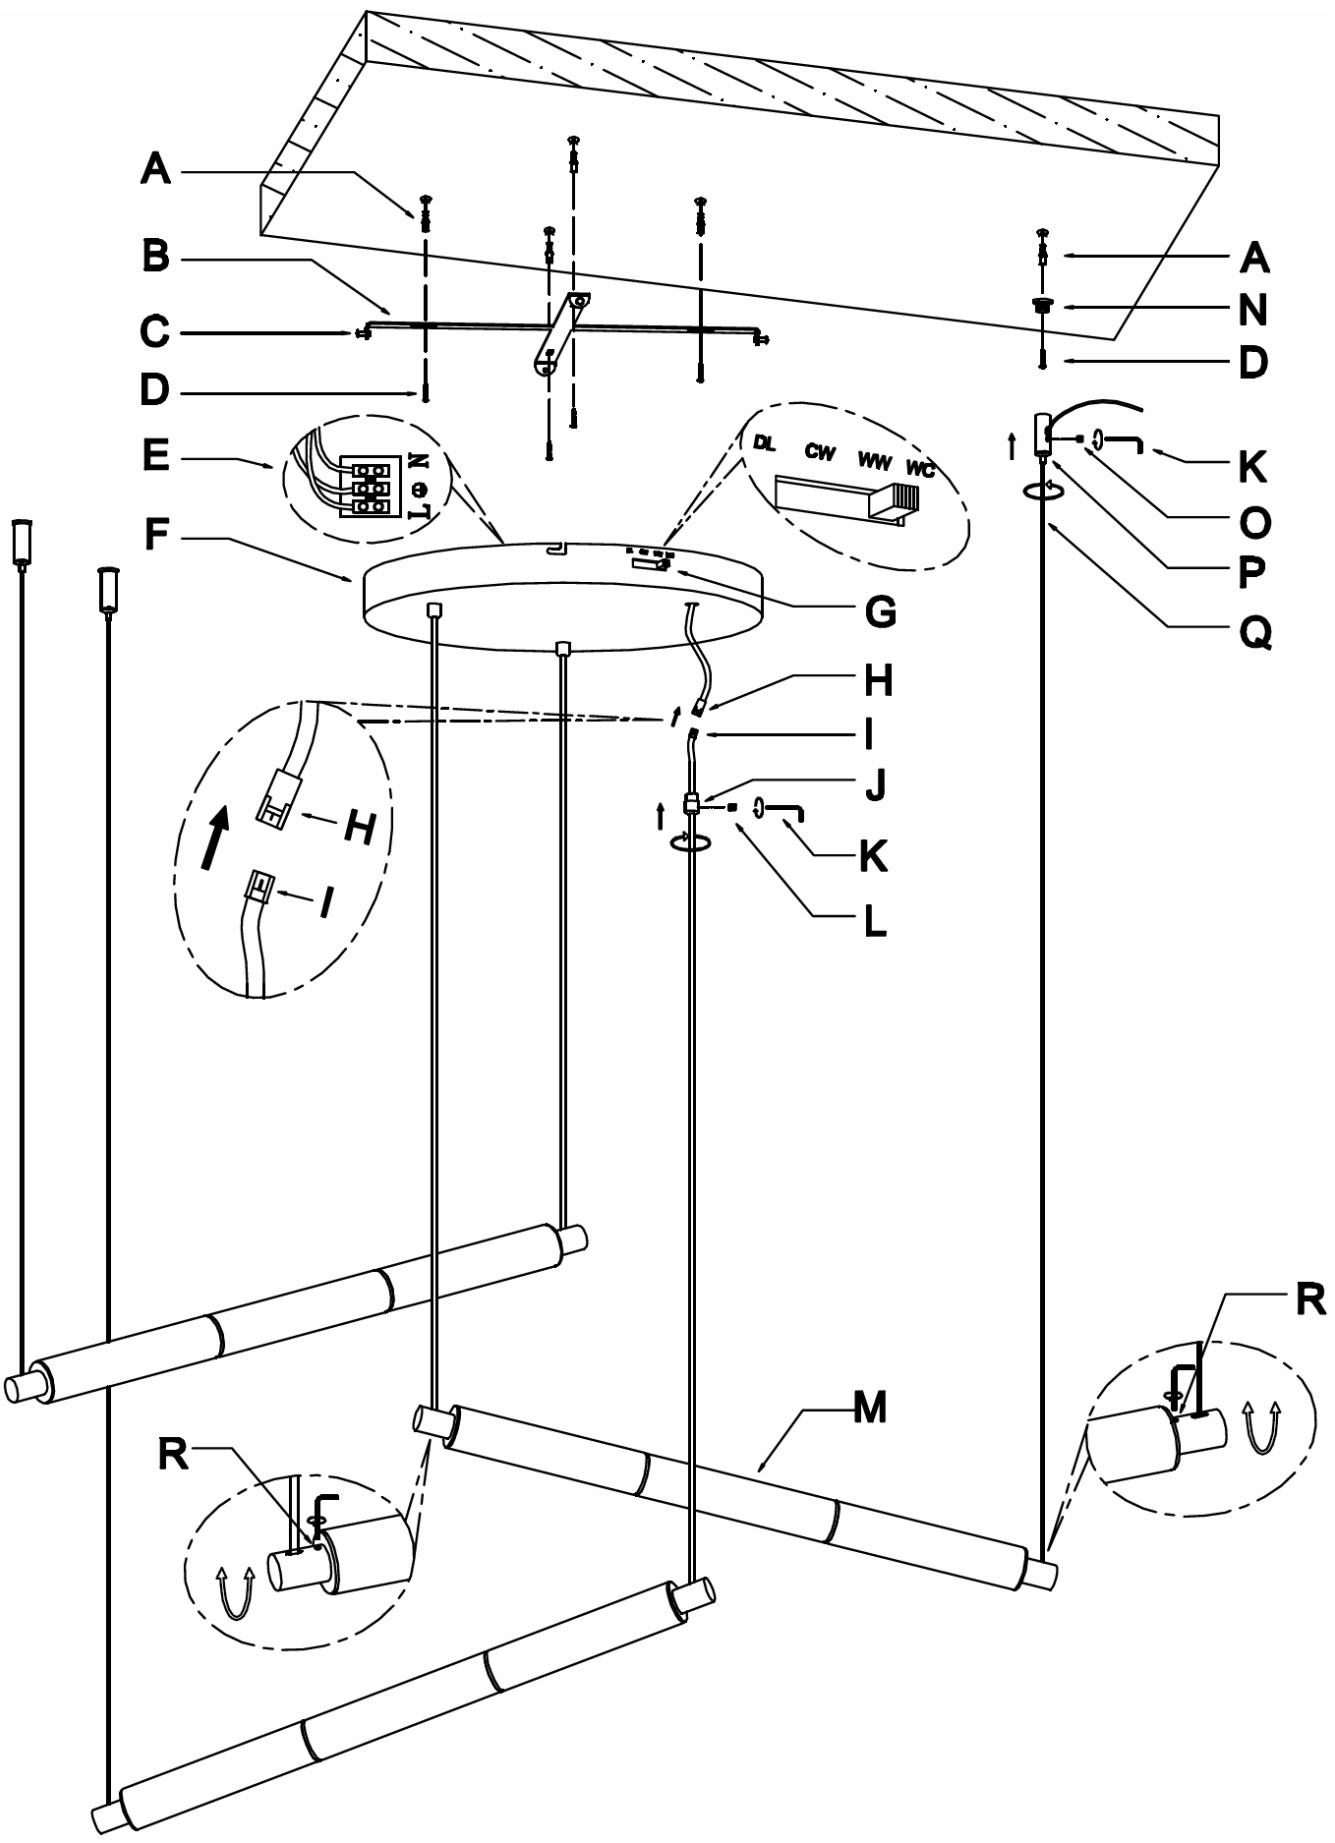

Troubleshooting		
PROBLEM	POSSIBLE CAUSE	SUGGESTED SOLUTION
Does not work. (New installation)	Loose wiring or no power to the luminaire.	Check your circuit breaker/safety switch box and turn on the power to your circuit.
		Contact the installing licensed electrician to check if the luminaire has been installed correctly.
Does not work. (Existing installation)	No power to the luminaire.	Check your circuit breaker/safety switch box and turn on the power to your circuit.
		Contact your nearest Beacon Lighting store.
Flickers when dimming. (New installation)	Non-recommended dimmer used.	Check the dimmer used. Ensure the dimmer used is on the list of recommended dimmers in this manual.
	Some dimmers have a variable loading adjustment function. This may not have been adjusted during the installation of the dimmer.	The variable resistor needs to be adjusted to suit the luminaire load to reduce the flickering.
Flickers when dimming. (Existing installation)	Dimmer position on low.	Ensure the dimmer position is on the maximum setting before turning on the luminaire and adjust the dimmer down to your desired light level.
Buzzing sound.	Non-recommended dimmer used.	Check the dimmer used. Ensure the dimmer used is on the list of recommended dimmers in this manual.
Uneven light on start-up	Dimmer position on low when switched on.	Ensure the dimmer position is on the maximum setting before turning on the luminaire and adjust the dimmer down to your desired light level.

Safety Tips

- Always ensure the power is OFF and the luminaire has cooled down before performing any maintenance, cleaning or making any adjustment to the luminaire.
- To avoid injury or damage to the luminaire, ensure power leads and screws are secure before connecting power.
- Select a suitable location away from liquids and hazards.
- To clean, wipe with a damp clean cloth. Do NOT soak or immerse the luminaire in water or other liquids.
- Ensure that the luminaire does not come in contact with corrosive chemicals/solvents or abrasive cleaners etc.
- The light source of this luminaire is not replaceable; when the light source reaches its end of life, the whole luminaire shall be replaced. There are no serviceable parts, do not attempt to dismantle or open the product.

Specifications

SKU #	020952
Colour	Aged Brass with Spanish Alabaster
Rated Voltage	220-240V~ 50Hz
Rated Wattage	32W
LED Specs	Colour shifting (3000K-4000K-5000K) LEDs *, Dimmable, CRI>90
Rated Lumens	2400 lumens Max.
Highly Recommended Dimmers	Lucci Power SKU# 290989, 290992, 290993, 290994. MFL Artisan SKU# 197015, 197016, 197017, 197018. Buster + Punch DIM-002
Compatible Dimmers	Clipsal 31E2PUDM, 31E2RUDM, 32E450UDM. DIGINET LED Smart MEDM. HPM Cat. 400T.
Weight	8.5kg
Canopy Dimensions	Dia:400mm H:40mm
Luminaire Dimensions	Dia:43mm L:680mm Susp:3000mm MAX

***NOTE:** Use the toggle switch on the canopy of the luminaire to select the colour temperature (“WW” for 3000K *Warm White*, “CW” for 4000K *Cool White*, or “DL” for 5000K *Daylight*) or move the switch to the “WC” (*Wall Control*) setting to enable “Scene Change at the Wall Switch” functionality. Please note the toggle switch must only be operated when power to the luminaire has been switched off. Changing the toggle switch settings while the luminaire is powered may cause damage to the LED driver.

- ***NOTE:** The “Scene Change at the Wall Switch” function is designed to operate with a mechanical or relay ON/OFF switch, as well as selected semi-conductor ON/OFF switches, such as MFL Artisan or Lucci Power Dimmers with ON/OFF functionality outlined above. Please note this colour shifting function may not operate correctly on all semi-conductor switches and will not work on any switch that features a ‘soft-start’ function.