

TILT BRACKET

SKU# 140783

To ensure correct function and safety, please read and follow all instructions carefully before assembly, installation and use of this product. Please keep instructions for future reference.

NOTE: This installation instruction applies to the tilt bracket only.

The ribbon track, driver and luminaires are sold separately.


Warranty

- This product is covered by a 12-month warranty valid for in-store replacement or refund only.
- The warranty period starts from the date of purchase, not the date of installation.
- Please retain proof of purchase for any warranty enquiries.
- Warranty will be void if there is any damage due to improper usage or modification to the product.
- Failure to comply with the instructions in this manual may increase the risk of damage or injury and will void the warranty.

Installation Requirements


- Select a suitable location for installation:
 - This product is suitable for indoor use only.
 - The mounting point must be a solid surface, such as concrete or a thick wooden structure. The tension on the ribbon track is 120kg (1177N).
 - The maximum mechanical loading for the ribbon track system, inclusive of the weight of luminaires and accessories is 9kg. Do not exceed this weight.
 - The maximum angle of ribbon track from the horizontal of the tilt bracket is 45°. (refer to diagram on page 2)
 - The ribbon track system is unsuitable for the connection of inductive loads.
 - It is the user's responsibility to ensure electrical, mechanical and thermal compatibility between the ribbon track system and luminaires attached to it.
- Lay out all the components on a smooth surface and make sure no components are missing before assembling. If parts are missing, return the complete product to the place of purchase for inspection or replacement.
- Check whether the product has been damaged during transport. Do not operate/install any product which appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.

INCLUDED PARTS:

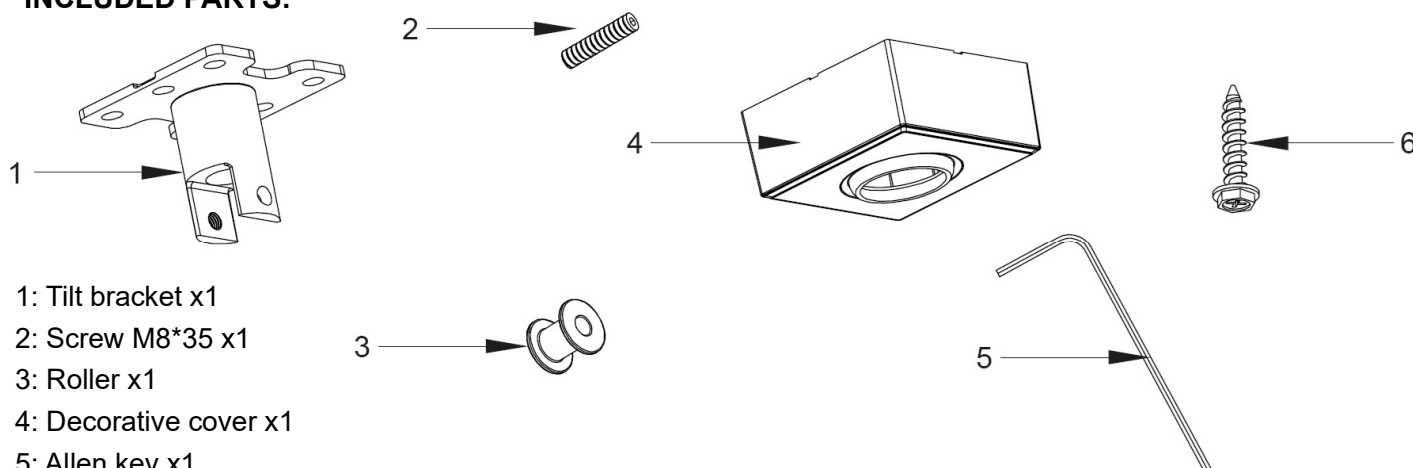

Installation Directions

1. Remove all packaging material from the product and be careful not to throw away accessories that may be hidden within the packaging material.
2. Select a suitable location for installation, see page 1 for the installation requirements.
3. Use the tilt bracket (1) as a template to mark the screw hole positions on the mounting surface. (Fig. A)
4. Drill the installation holes into the mounting surface.
5. Install the tilt bracket (1) onto the mounting surface by using appropriately sized mounting screws (6) and anchors. Ensure the screws (6) and anchors used are suitable for the mounting surface and the surrounding environment. (Fig. A)
6. Install the decorative cover (4) over the tilt bracket (1).
7. Insert the ribbon track (not included) and roller (3) into the tilt bracket (1). (Fig. C)
8. Install the screw (2) and secure by tightening with the allen key (5). (Fig. D)
9. After the installation is complete, check and ensure everything is secure and there are no loose components.

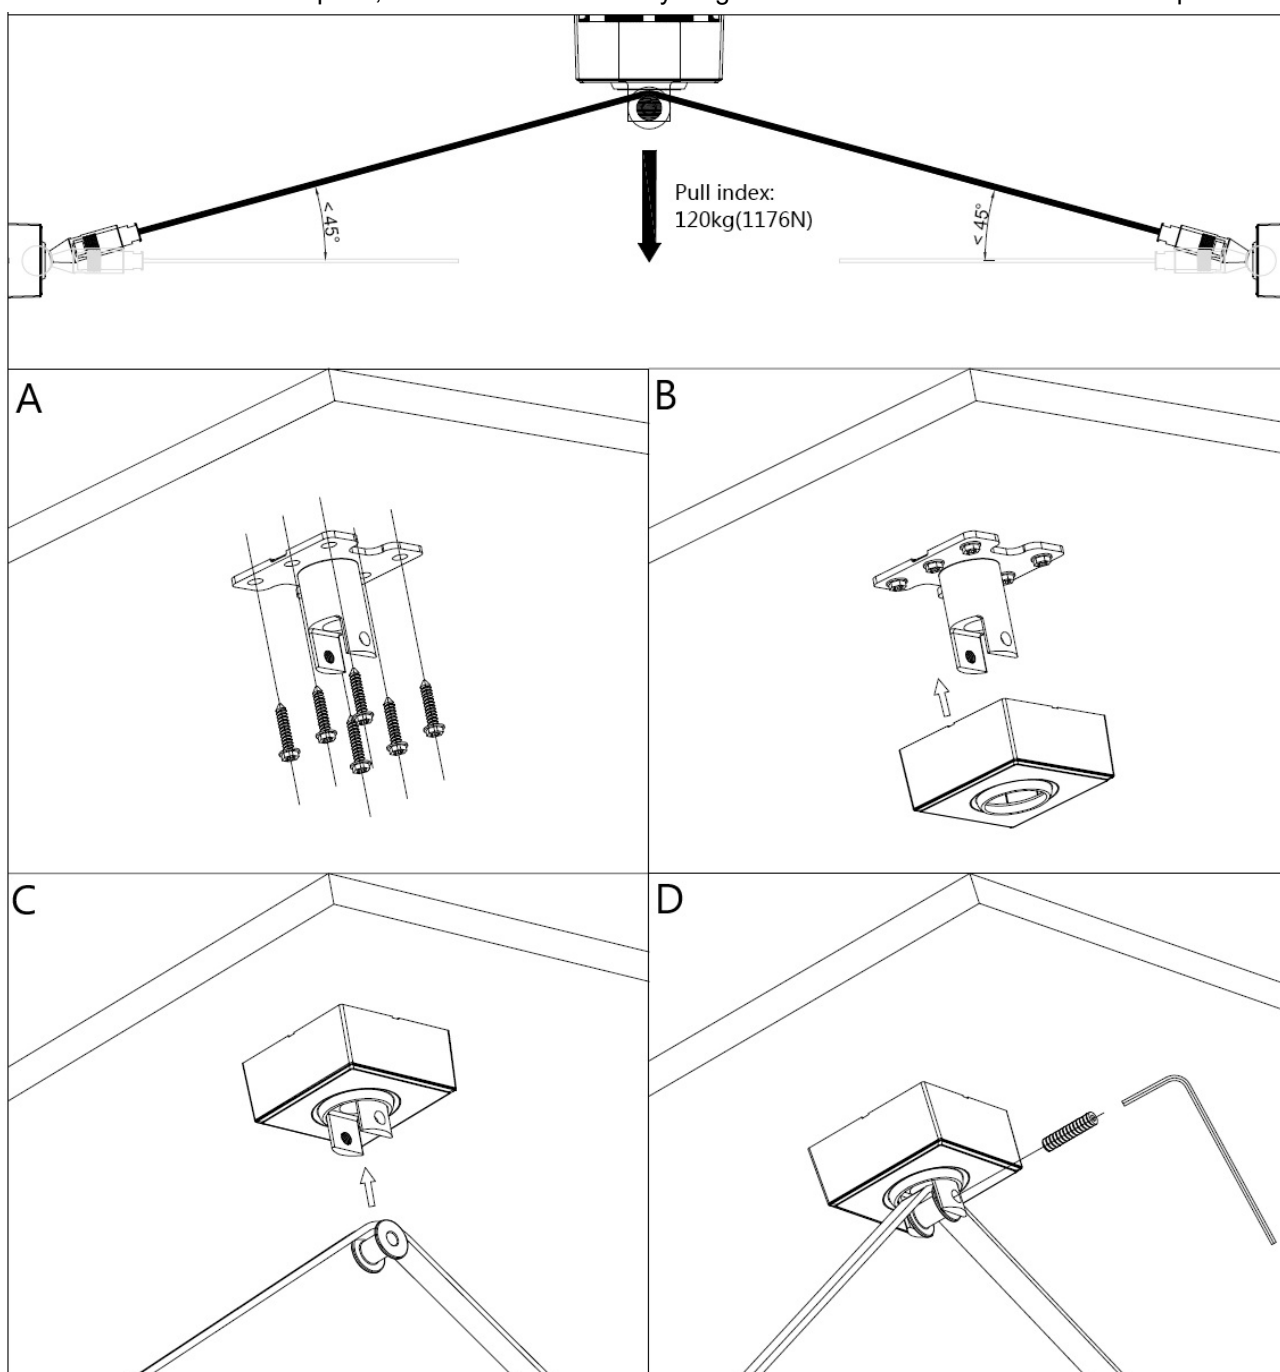

Safety Tips

- Always ensure the power is OFF and the product has cooled down before performing any maintenance, cleaning or adjustment.
- To avoid injury or damage to the product, ensure that power leads and screws are secure before connecting the power.
- To clean, wipe with a soft damp cloth. Do NOT soak or immerse the product in water or other liquids.
- Ensure that the product does not come in contact with corrosive chemicals/solvents or abrasive cleaners etc.

Specifications

SKU #	140783
Weight	0.3kg
Dimensions	H:65mm W:87mm L:87mm