 


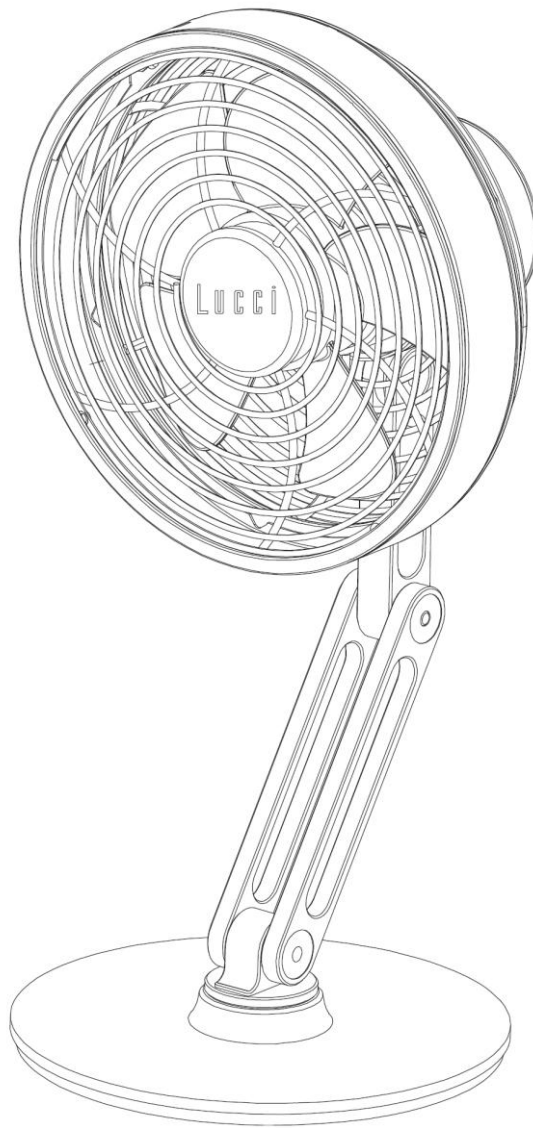

LUCCI AIR TORO PORTABLE DESK FAN

- **WARRANTY**
- **SAFETY PRECAUTIONS**
- **FAN IDENTIFICATION**
- **OPERATION**
- **MAINTENANCE**
- **SPECIFICATIONS**

CAUTION
**READ INSTRUCTIONS CAREFULLY FOR SAFE
INSTALLATION AND FAN OPERATION.**

 
 
 
 
WARRANTY

1. This fan is covered by 2-year warranty valid for in-store replacement or refund only.
2. The warranty period starts from the date of purchase. Please retain the proof of purchase.
3. Warranty will be void if there is any damage due to improper usage or modification to the fan.
4. Failure to comply with the instructions in this manual may increase the risk of damage or injury and will void the warranty.

SAFETY PRECAUTIONS

1. To ensure safe and correct operation, please read and follow all instructions carefully before installation and use. Please keep these instructions for future reference.
2. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
3. Children should be supervised to ensure that they DO NOT play with the appliance.
4. This is not a toy. This is an electrical appliance and must be operated and maintained by an adult.
5. **WARNING: Use only an external supply with the following specifications: 5V — — — 1A.**
6. The normal temperature range for charging the battery is: 15°C to 40°C.
7. **WARNING: If unusual oscillating movement is observed, immediately stop using the fan and contact the manufacturer, its service agent or suitably qualified persons**
8. If the fan emits unusual noises, odours, or smoke, switch it OFF immediately.
9. DO NOT operate the fan if it has malfunctioned, been dropped, or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair, or replacement.
10. Make sure no components are missing or have been damaged during transport. DO NOT operate any product which appears damaged in any way. If parts are missing or damaged, return the complete product to the place of purchase for inspection, repair or replacement.
11. This product contains no user-serviceable parts. DO NOT open or dismantle the product. Failure to follow these instructions may result in electric shock or damage to the product.
12. Avoid contact with moving parts. DO NOT insert any object through the grille when the fan is operating.
13. Select a suitable location for this fan:
 - Ensure it is on a flat and stable surface.
 - This fan is suitable for use in indoor environments only.
 - This fan is not waterproof. Keep it away from water, dust, humidity, direct sunlight, and high-temperature areas.
 - Ensure the fan is operated in a well-ventilated area to prevent overheating.
 - DO NOT place flammable materials or objects near the fan.
 - DO NOT cover the grille or operate the fan near curtains or similar obstructions.
14. The rechargeable lithium-ion battery of this fan is not replaceable; when the rechargeable lithium-ion battery reaches its end of life, the whole fan shall be replaced.

FAN IDENTIFICATION

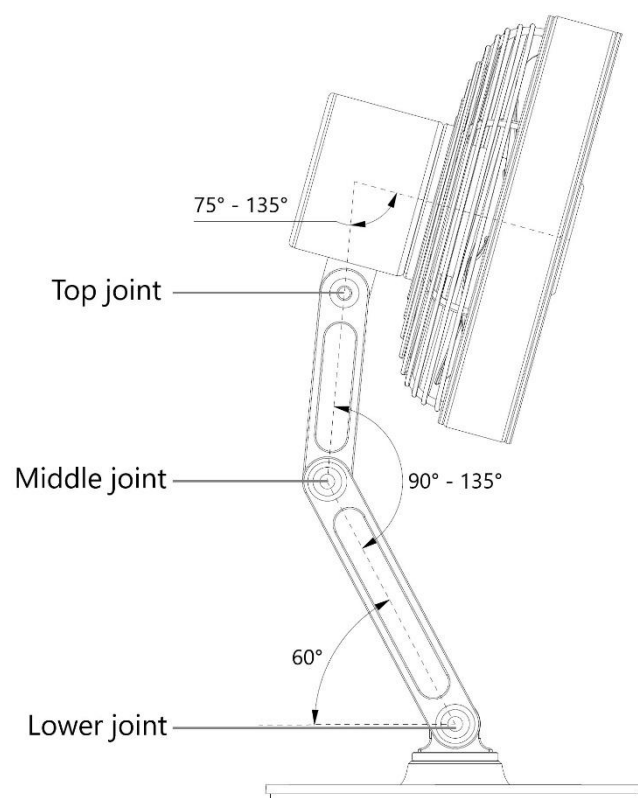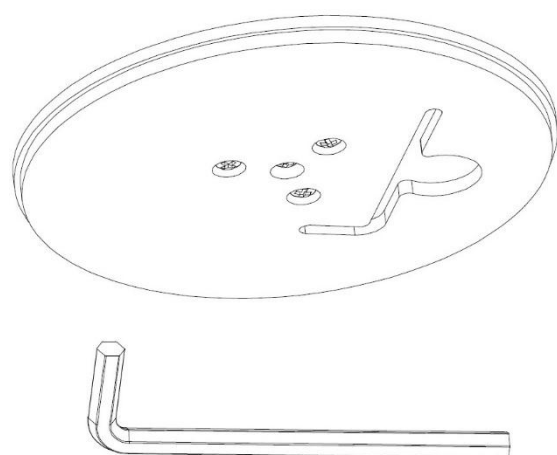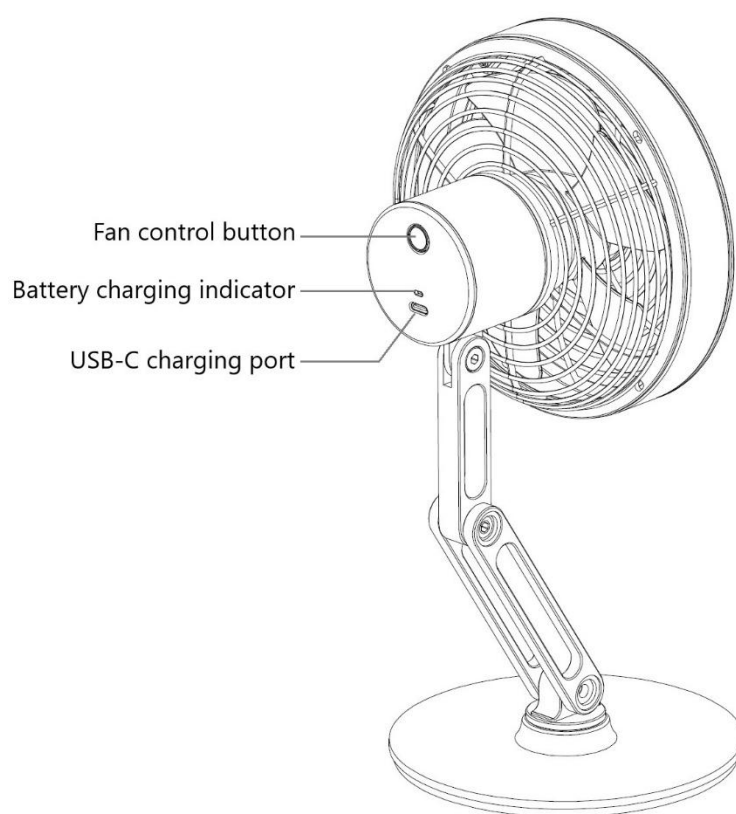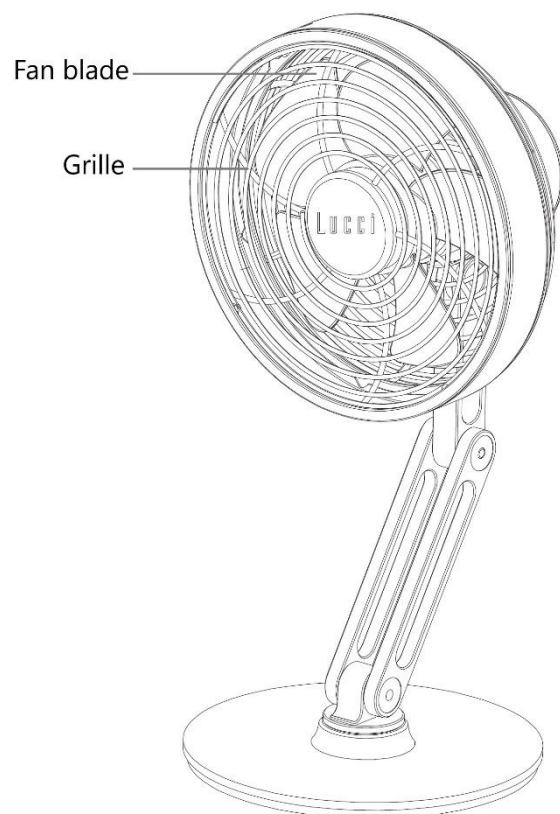

OPERATION

- Remove all packaging material from the fan and be careful not to throw away accessories that may be hidden within the packaging material.
- Fully charge the fan before first use.
- To charge the fan, insert the supplied USB-C cable into the charging port located at the rear of the motor housing, and connect it to a compatible power adaptor (not included) with an output of 5V DC, 1A.
- The battery charging indicator will display a white light while charging and will turn off once the battery is fully charged.

FAN

1. Press the fan control button to switch the fan ON.
2. Press the button again to cycle through the 3 different fan speeds.
3. Continue pressing the button until the fan turns OFF.

BATTERY CHARGING INDICATOR

- A white light indicates that the battery is charging.
- The indicator light will switch off once the battery is fully charged.
- When the battery level is low, the indicator will flash three times before the fan automatically shuts off.

ADJUSTING THE AIRFLOW DIRECTION

1. Remove the allen key from the base of the fan. Adjust each joint one at a time for better control.
2. **Lower Joint Adjustment**
Loosen the nut at the lower joint and move the lower arm forward or backward (up to 60°).
This adjusts the overall tilt and direction of the fan.
3. **Middle Joint Adjustment**
Loosen the nut at the middle joint and adjust the upper arm up or down (90° - 135°).
This adjusts the height and reach of the fan.
4. **Top Joint Adjustment**
Loosen the nut at the top joint and adjust the fan head up or down (75° - 135°).
This adjusts the airflow direction.

NOTE: Do not adjust the joints beyond the specified angle limits, as this may cause instability or damage the joints.

5. After adjustment, check and ensure all nuts are secure. All arms and fan head are firm and secure.
The fan is properly balanced on the base.

POSITIONING THE FAN

1. Place the fan on a stable and flat surface during operation. Also refer to the fan location requirements on page 1 of this manual.

MAINTENANCE

NOTE: Always switch OFF the fan before performing any maintenance or cleaning.

- Regularly inspect the fan for any signs of damage or wear.
- It is recommended to charge the battery at least every three months during storage to prevent deep discharge. Regular charging (at least every three months) helps maintain battery health, ensures reliable operation, and extends the overall service life of the fan.
- Periodic cleaning every 6 months is recommended.
- Use a soft brush or lint-free cloth to clean the fan and avoid scratching the surface.
- DO NOT soak or immerse the fan in water or any other liquid, as this may damage the motor or blades or battery and create a risk of electric shock.
- To clean the fan, wipe with a damp clean cloth only. DO NOT use organic solvents or cleaners.
- The motor has a permanently lubricated ball bearing and does not require any additional lubrication.

SPECIFICATIONS

SKU#	211045	211046
Colour	Almond	Brushed Chrome
Rated Input	USB-C 5V DC 1A 5W	
Rated Power	3.5W Max.	
Battery	3.7V 2200mAh 8.14Wh 203035 Lithium-ion Battery (non-replaceable)	
Airflow	4.2m/s Max. (3 Speed Control)	
Charging Time	5 hours	
Operation Time*	2 - 7 hours (Maximum & Minimum)	
Weight	1.0kg	
Dimensions	H:310mm W:170mm E:153mm	

* Battery performance will gradually decline over time, this will reduce the operating time.