



LUCCI AIR AEROGO PORTABLE CAMPING FAN

- WARRANTY
- SAFETY PRECAUTIONS
- FAN IDENTIFICATION
- OPERATION
- MAINTENANCE
- SPECIFICATIONS

CAUTION
**READ INSTRUCTIONS CAREFULLY FOR SAFE
INSTALLATION AND FAN OPERATION.**



WARRANTY

1. This fan is covered by 2-year warranty valid for in-store replacement or refund only.
2. The warranty period starts from the date of purchase. Please retain the proof of purchase.
3. Warranty will be void if there is any damage due to improper usage or modification to the fan.
4. Failure to comply with the instructions in this manual may increase the risk of damage or injury and will void the warranty.

SAFETY PRECAUTIONS

1. To ensure safe and correct operation, please read and follow all instructions carefully before installation and use. Please keep these instructions for future reference.
2. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
3. Children should be supervised to ensure that they DO NOT play with the appliance.
4. This is not a toy. This is an electrical appliance and must be operated and maintained by an adult.
5. **WARNING: Use only an external supply with the following specifications: 5V — — — 2A.**
6. The normal temperature range for charging the battery is: 15°C to 40°C.
7. **WARNING: If unusual oscillating movement is observed, immediately stop using the fan and contact the manufacturer, its service agent or suitably qualified persons.**
8. If the fan emits unusual noises, odours, or smoke, switch it OFF immediately.
9. DO NOT operate the fan if it has malfunctioned, been dropped, or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair, or replacement.
10. Avoid contact with moving parts. DO NOT insert any object through the grille when the fan is operating.
11. Make sure no components are missing or have been damaged during transport. DO NOT operate any product which appears damaged in any way. If parts are missing or damaged, return the complete product to the place of purchase for inspection, repair or replacement.
12. This product contains no user-serviceable parts. DO NOT open or dismantle the product. Failure to follow these instructions may result in electric shock or damage to the product.
13. Select a suitable location for this fan:
 - Ensure it is on a flat and stable surface.
 - This fan is suitable for use in indoor environments only.
 - This fan is not waterproof. Keep it away from water, dust, humidity, direct sunlight, and high-temperature areas.
 - Ensure the fan is operated in a well-ventilated area to prevent overheating.
 - DO NOT place flammable materials or objects near the fan.
 - DO NOT cover the grille or operate the fan near curtains or similar obstructions.
14. The LED light source and rechargeable lithium-ion battery of this fan is not replaceable; when the LED light source or rechargeable lithium-ion battery reaches its end of life, the whole fan shall be replaced.
15. DO NOT look directly at the LED light source while it is on, as this may cause eye injury

FAN IDENTIFICATION

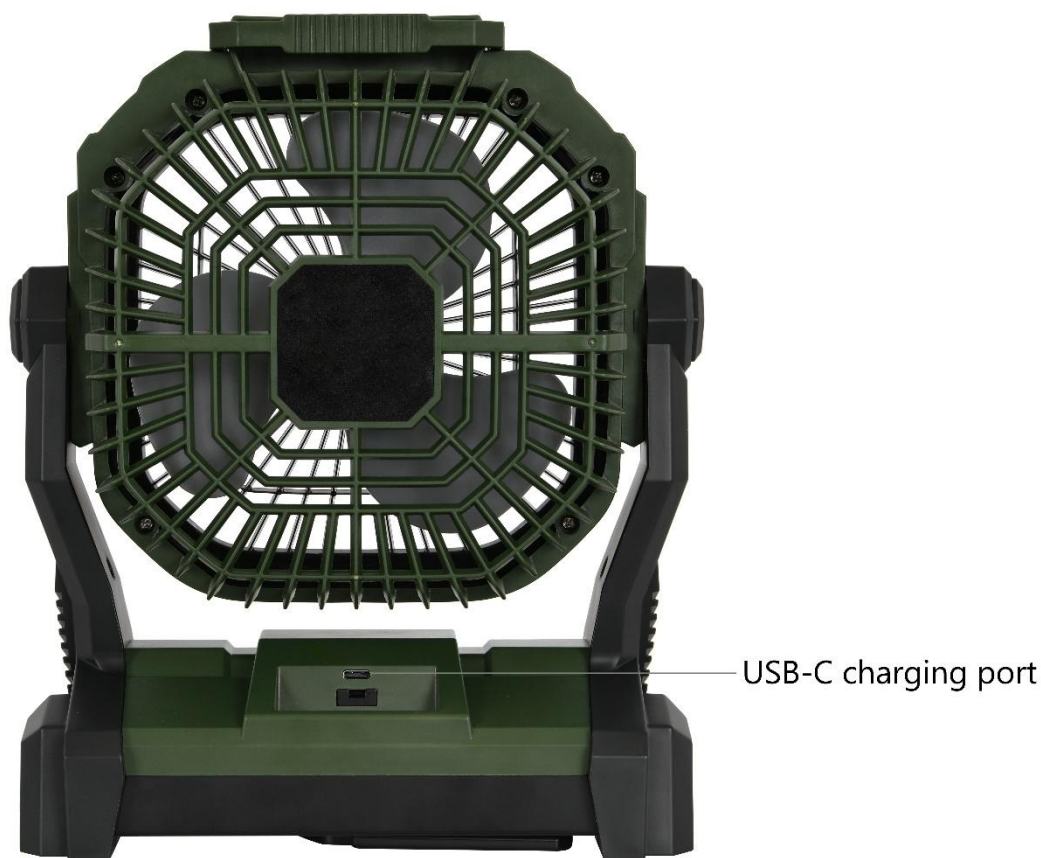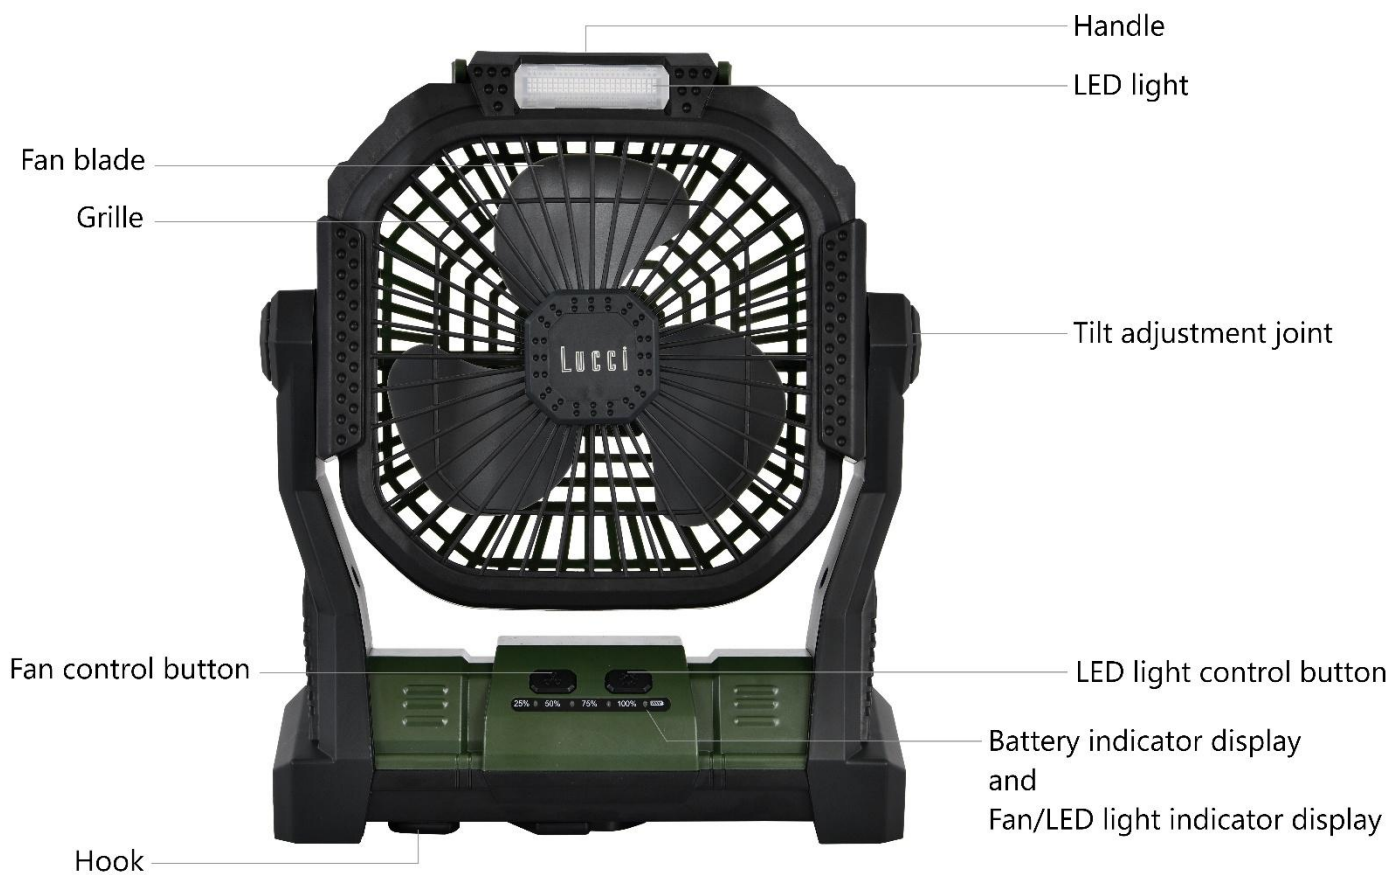

OPERATION

- Remove all packaging material from the fan and be careful not to throw away accessories that may be hidden within the packaging material.
- Fully charge the fan before first use.
- To charge the fan, insert the supplied USB-C cable into the charging port located at the rear of the fan, and connect it to a compatible power adaptor (not included) with an output of 5V DC, 2A or lower.
- The battery indicator display will show the charging status and battery level – 25%, 50%, 75% 100%.

FAN

1. Press the fan control button to switch the fan ON.
2. Press the button again to cycle through the 4 different fan speeds – 25%, 50%, 75% 100%.
Refer to the fan indicator display for the current fan speed status.

NOTE: After 3 seconds, the indicator display will revert to the battery status.

3. Continue pressing the button until the fan turns OFF.

LED LIGHT

1. Press the LED light control button to switch the LED light ON.
2. Press the button again to cycle through the 4 different light levels – 25%, 50%, 75% 100%.
Refer to the LED light indicator display for the current brightness level.

NOTE: After 3 seconds, the indicator display will revert to the battery status.

3. Continue pressing the button until the LED light turns OFF.

BATTERY STATUS

1. Refer to the battery indicator display on the base of the fan to check the remaining battery level.
2. This display also indicates the current fan speed and LED brightness level.

ADJUSTING AIRFLOW DIRECTION

1. Use the tilt adjustment joint to angle the fan head to your desired position.

POSITIONING THE FAN

1. Place the fan on a stable and flat surface during operation. Also refer to the fan location requirements on page 1 of this manual.
2. The integrated hook on the base of the fan also allows it to be hung securely if required.

CARRYING THE FAN

1. Use the handle located at the top of the unit for safe and convenient transport.

MAINTENANCE

NOTE: Always switch OFF the fan before performing any maintenance or cleaning.

- Regularly inspect the fan for any signs of damage or wear.
- It is recommended to charge the battery at least every three months during storage to prevent deep discharge. Regular charging (at least every three months) helps maintain battery health, ensures reliable operation, and extends the overall service life of the fan.
- Periodic cleaning every 6 months is recommended.
- Use a soft brush or lint-free cloth to clean the fan and avoid scratching the surface.
- DO NOT soak or immerse the fan in water or any other liquid, as this may damage the motor or blades or battery and create a risk of electric shock.
- To clean the fan, wipe with a damp clean cloth only. DO NOT use organic solvents or cleaners.
- The motor has a permanently lubricated ball bearing and does not require any additional lubrication.

SPECIFICATIONS

SKU#	216183
Rated Input	USB-C 5V DC 2A 10W
Rated Power	3.8W Max. (2.9W fan + 0.9W LED)
Battery	3.7V 8000mAh 29.6Wh 126090 Lithium-ion Battery (non-replaceable)
LED Specs	0.9W LED, 32 lumens Max., 6300K – Day Light, 4 Step Brightness Level (25%, 50%, 75%, 100%)
Airflow	4.2m/s Max., 4 Speed Control (25%, 50%, 75%, 100%)
Charging Time	6 hours
Operation Time*	19 – 55 hours (Light only – Maximum & Minimum) 9 - 18 hours (Fan only – Maximum & Minimum) 6 hours (Fan & Light – Both at Maximum)
Weight	0.7kg
Dimensions	H:260mm W:218mm E:83mm

* Battery performance will gradually decline over time, this will reduce the operating time.