

KLIN LED TOUCH DIMMABLE TABLE LAMP

SKU# 250405, 250406, 250407, 250408.

Rated Input 5VDC, 2A

To ensure correct function and safety, please read and follow all instructions carefully before assembly, installation and use of this product. Please keep the instructions for future reference.

Warranty


- This product is covered by a 3-year warranty valid for in-store replacement or refund only.
- The warranty period starts from the date of purchase. Please retain the proof of purchase for any warranty enquiries
- The warranty will be void if there is any damage due to improper usage or modification to the product.
- Failure to comply with the instructions in this manual may increase the risk of damage or injury and will void the warranty.

Installation Requirements

- Select a suitable location for this product:
 - Ensure it is on a flat and stable surface.
 - This product is suitable for indoor use only.
 - This product is not waterproof. Keep away from wet, dusty, humid, direct sun light or hot areas.
 - If the portable luminaire is placed in an area prone to moisture, ensure that the area is well ventilated, and an appropriately rated exhaust fan is used if required. Damage or corrosion caused by moisture is not a product fault, and as such is not covered under warranty.
- Lay out all the components on a smooth surface and make sure no components are missing.
If parts are missing, return the complete product to the place of purchase for inspection or replacement.
- Check whether the product has been damaged during transport. Do not operate/install any product which appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.

Operation Directions

1. Install the head onto the base. The head is magnetically attached to the base of the luminaire (Fig. A).
2. Adjust the head to your desired angle, the head can freely rotate over the base (Fig. B).
3. Press the touch switch at the top of the head to turn it ON (Fig. C).
Press the touch switch to change the colour temperature.
Long press the touch switch to dim and adjust brightness up or down.
4. Fully charge the product before using for the first time.
To charge the product, insert the included USB-C cable into the charging port and plug into a compatible adaptor (not included) with a 5V DC 2A output. (Fig. D)
5. The light will be red while the battery is charging.
The light will be green after the battery is fully charged.

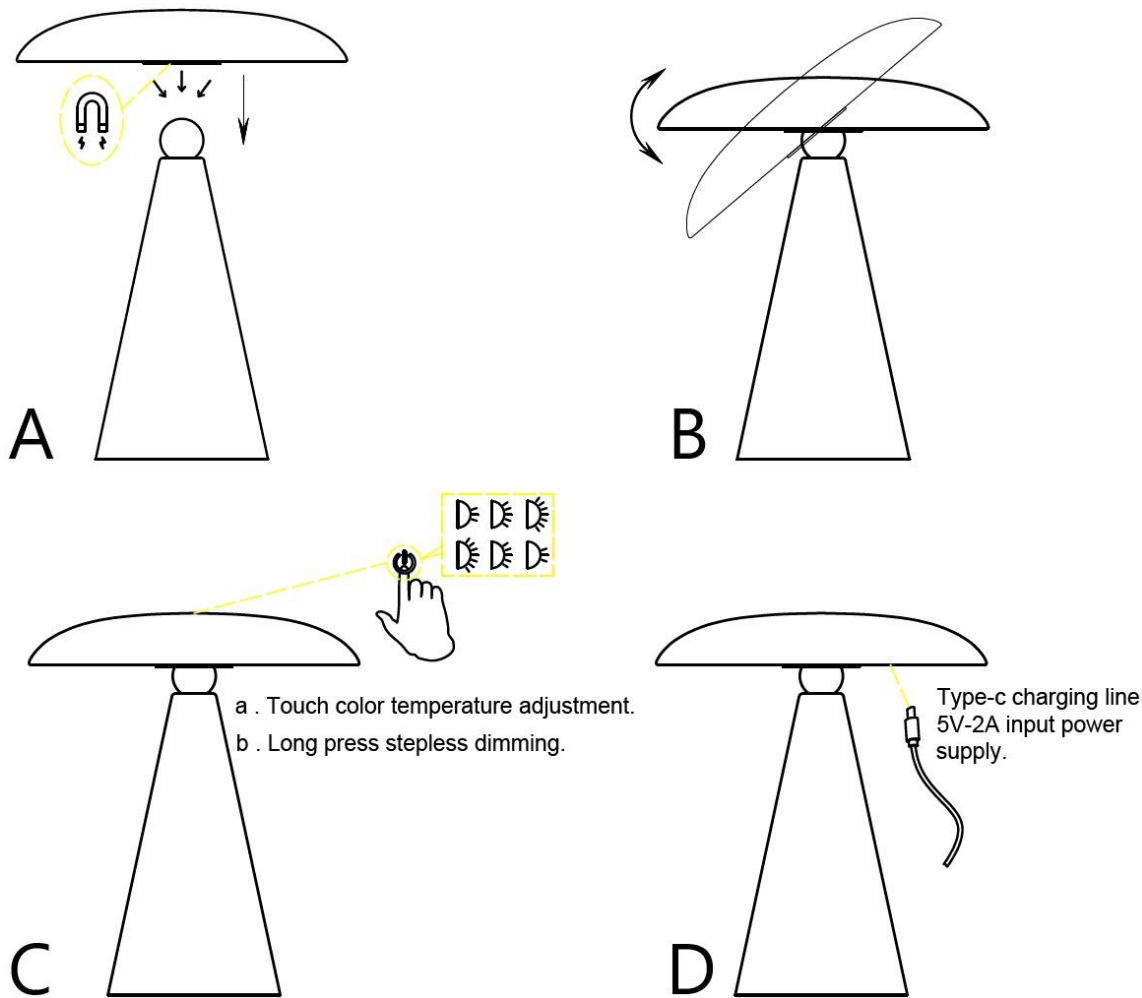

Safety Tips and Warnings

- Always ensure the power is OFF and the product has cooled down before performing any maintenance, cleaning or making any adjustment to the product.
- This product is NOT a toy. Keep out of reach of small children.
- This product is NOT suitable for children aged 3 and under.
- Young children should be supervised to ensure that they do not play with this product.
- This product is for decorative purpose only.
- Handle the product with care to avoid any damage or breakage.
- Select a suitable location away from liquids and hazards.
- The light source of this product is not replaceable; when the light source reaches its end of life, the whole product shall be replaced.
- To clean, wipe with a soft damp cloth or duster. Do NOT soak or immerse the product in water or other liquids.
- Ensure that the product does not come in contact with corrosive chemicals/solvents or abrasive cleaners etc.

Specifications

SKU #	250405	250406	250407	250408
Colour	White	Black	Beige	Brown
Battery	3.7V 3600mAh (2x1800mAh) 18650 Built-in Lithium Ion Battery (non-replaceable)			
Rated Input	USB-C, 5V DC, 2A			
LED Specs	4W LED, 400 lumens, 2700K-4000K-6000K, CRI≥90, Stepless Dimming.			
Weight	1.0kg			
Dimensions	H:265mm Dia:230mm			